

Before usage:

- 1) check if water tank (Wasserbehälter) is empty. If not empty it.
- 2) Close water tank



- 3) check if dust filter is empty. If not empty it.



- 4) start the mashine. Preferred selection is Pflegeleicht schranktrocken.



- 5) If finished set to Aus, empty dust filter and water tank.